




OWNER'S INSTRUCTIONS

AWT17XSHDA
AWT18XSHDE
AW24XSHEB

Window-type Room Air Conditioner (Cool)

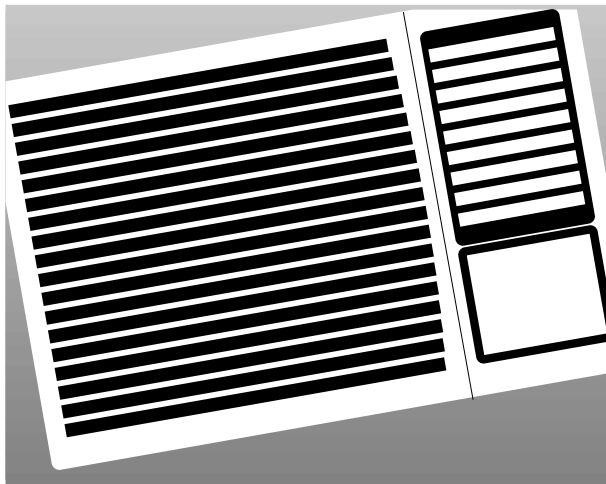

Safety Precautions

The following safety precautions must be taken when using your air conditioner.

- 1 *The unit must be plugged into an independent circuit.
The air conditioner must be installed in accordance with national wiring regulations and safety regulations wherever applicable.*
- 2 *Some installation locations may require installation of a short circuit breaker or grounding.*
- 3 *If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.*
- 4 *MAKE sure that the unit is correctly ventilated at all times ;
do NOT place clothing or other materials over it.*
- 5 *NEVER spill any kind of liquid into the unit. Should this happen, unplug the unit and contact an authorized service center.*
- 6 *Do NOT insert anything between the air outlet blades because the inner fan may be damaged and could cause injury. Keep children away from the unit.*
- 7 *Do NOT place any obstacles in front of the unit.*
- 8 *Users of this product are cautioned not to attempt repairs.
Instead, they are requested to directly contact a designated service center or the outlet at which the product was purchased.*
- 9 *Do not use an extension cord with this product.*
- 10 *The appliance is not intended for use by young children without supervision ;
young children should be supervised to ensure that they do not play with the appliance.*
- 11 *Never store or ship the air conditioner upside down or sideways to avoid damage to the compressor.*
- 12 *Max current is measured according to IEC standard for safety
and current is measured according to ISO standard for energy efficiency.*

CAUTION

The manufacturer does not assume responsibility for accidents or injury caused by an incorrectly installed air conditioner. If you are unsure about installation, contact an installation specialist.

Contents

PREPARING YOUR AIR CONDITIONER

■ Safety Precautions	2
■ Description of Each Component	4
■ Remote Control - Buttons	5
■ Getting Started	6
■ Inserting the Remote Control Batteries	7

USING THE CONTROL PANEL ON THE UNIT

◆ OPERATING YOUR AIR CONDITIONER	
■ Cooling Your Room	9
■ Airing Your Room	10
■ Removing Excess Humidity	11
◆ PROGRAMMING YOUR AIR CONDITIONER	
■ Setting the On Timer	12
■ Setting the Off Timer	13
■ Setting the Sleep Timer	14
■ Selecting Energy Saving Mode	15


USING THE WIRE LESS REMOTE CONTROL

◆ OPERATING YOUR AIR CONDITIONER	
■ Cooling Your Room	17
■ Airing Your Room	18
■ Removing Excess Humidity	19
◆ PROGRAMMING YOUR AIR CONDITIONER	
■ Setting the On Timer	20
■ Setting the Off Timer	22
■ Setting the Sleep Timer	22
■ Selecting Energy Saving Mode	23
■ Adjusting the Air Flow Direction Horizontally	23


RECOMMENDATIONS FOR USE

◆ GENERAL, TROUBLESHOOTING & TECHNICAL SPECIFICATIONS	
■ Adjusting the Air Flow Direction Vertically	24
■ Operating Recommendation	25
■ Temperature and Humidity Ranges	25
■ Cleaning Your Air Conditioner	26
■ Solving Common Problems	27
■ Technical Specifications	28
◆ INSTALLATION	29-30

Description of Each Component

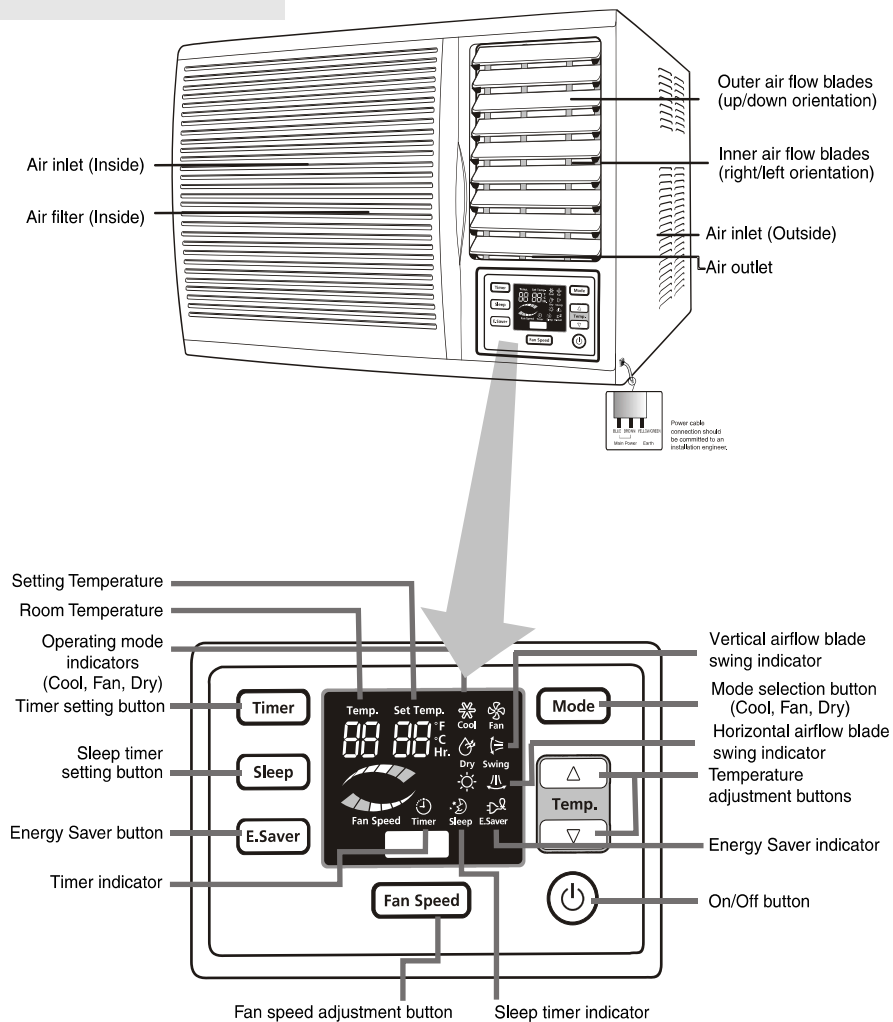

Remote Control - Buttons and Display

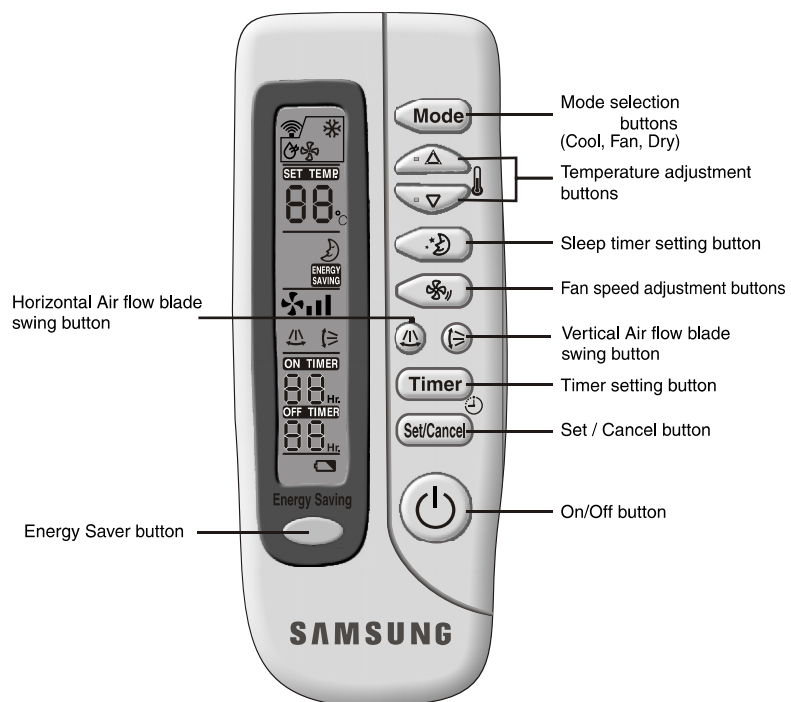

Getting Started

You have just purchased a Samsung window-type room air conditioner which should be installed following your installation manual.

Your Owner's Instructions contain much valuable information on using your air conditioner. Please take the time to read them as they will help you take full advantage of the unit's features.

The booklet is organized as follows.

◆ *The following figures are shown on pages 4 and 5:*

- *Description of Each Component*
- *Remote control (buttons)*

They will help you find the buttons and understand the symbols displayed.

◆ *In the manual, you will find a series of step-by-step procedures for each function available.*

The illustrations in the step-by-step procedures use four different symbols:

			
PRESS	PUSH	IMPORTANT	NOTE

Inserting the Remote Control Batteries

You must insert or replace the remote control batteries when :

- ◆ *You purchase the air conditioner*
- ◆ *The remote control does not work correctly*





- ◆ Use two AAA, LR03 1.5V batteries.
- ◆ Do not use old batteries or different kinds of batteries together.
- ◆ Batteries may be completely discharged after 12 months, even if they have not actually been used.

1 Push the battery cover on the rear of the remote control with your thumb in the direction of the arrow and remove it.


2 Insert the two batteries, taking care to respect the polarities :

- ◆ + on the battery with + on the remote control.
 - ◆ - on the battery with - on the remote control.
-

3 Close the cover by sliding it back until it clicks into place.

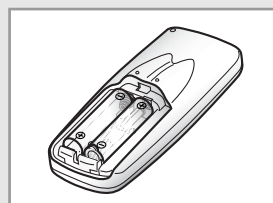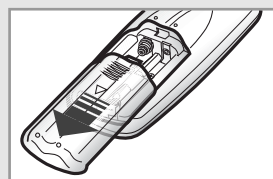

Using the Control Panel on the Unit

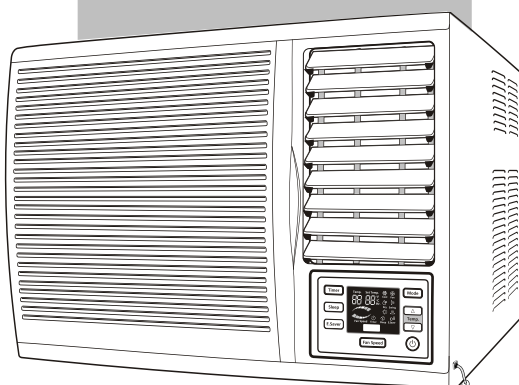

This chapter indicates how to operate and program your air conditioner with the control panel on the unit.

Cooling Your Room

You must select the Cool mode if you wish to lower the temperature in your room. You can also set the Fan speed.

- 1 Press the  (On/Off) button.

Result: ♦ The air conditioner starts up in the cool mode(Fan speed will not be changed).
♦ The unit beeps twice.

 The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ♦ Plugged in
- ♦ Stopped

It will start up normally after three minutes.

- 2 If the temperature is not displayed on the control panel:

Press the  button on the unit one or more times until the temperature is displayed.

Result: ♦ The unit beeps each time you press the  button.
♦ The air conditioner starts up in the Cool mode.

You can change modes at any time.

- 3 To adjust the temperature, press the  or  buttons on the unit one or more times until the desired temperature is displayed.

The temperature can be set between 18°C and 30°C.




Result: ♦ Each time you press the  or  buttons:
- The temperature is adjusted by 1°C and displayed on the control panel
- The unit beeps
♦ The air conditioner starts cooling, if the room temperature is higher than the selected temperature.
♦ If the room temperature reaches the set temperature, the air conditioner stops cooling, but the fan is still operating.

- 4 To set the fan speed:


Press the  button on the unit one or more times until the desired Fan speed  is displayed.

-  Low
-  Medium
-  High

- 5 To control the direction of the air flow, refer to pages 23 and 24.

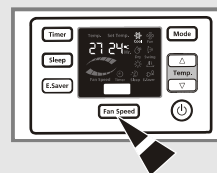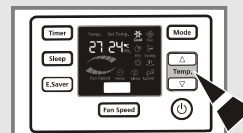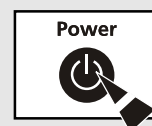


Airing Your Room

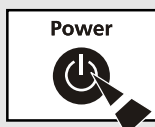

- 2 If necessary, press the  (On/Off) button.


Result:

- ◆ The air conditioner starts up in the cool mode(Fan speed will not be changed).
- ◆ The unit beeps twice.

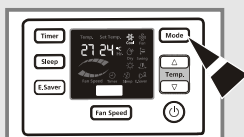

- 3 If the fan speed  is not displayed on the control panel:
Press the  button on the unit one or more times until the fan speed  is displayed.

Result: The unit beeps each time you press the  button.
The air conditioner starts up in Fan mode.
You can change modes at any time.
When the air conditioner is in the Fan mode, the temperature cannot be set or displayed.

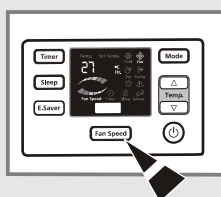

- 4 To set the fan speed:
Press the  button on the unit one or more times until the desired fan speed is displayed.
-  Low
 -  Medium
 -  High

- 5 To control the direction of the air flow, refer to pages 23 and 24.

Removing Excess Humidity

If the atmosphere in your room is very humid or damp, you can remove excess humidity without lowering the room temperature too much.

- 1 If necessary, press the  (On/Off) button.

Result:


- ◆ The air conditioner starts up in the Cool mode.
- ◆ The unit beeps.



The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.

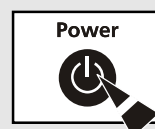


- 2 If the  is not displayed at the top of the control panel, press the  button on the control panel one or more times until it appears.

Result:

- ◆ The unit beeps each time you press the  button.
- ◆ The air conditioner runs in the Dry mode.

➤ You can change modes at any time.

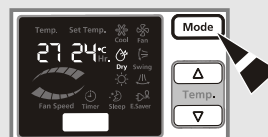


- 3 To adjust the temperature, press the  or  buttons one or more times until the required temperature is displayed.

Possible temperatures are between 18°C and 30°C inclusive.

Result: Each time you press the  or  buttons:

- The temperature is adjusted by 1°C
- The unit beeps

The air conditioner starts removing the excess humidity; the quantity of air is adjusted automatically.

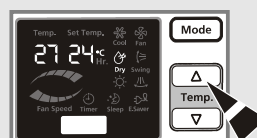

- 4 To control the direction of the air flow, refer to page 23 and 24.

Setting the On Timer

Power



The On Timer enables you to switch on the air conditioner automatically after a given time. You can select the On Timer only when the air conditioner is off you can select the On Timer only when the air conditioner operates in the Cool mode.

- 1 Check that the air conditioner has been switched off; if necessary, press the (On/Off) button.

- 2 Set the operating time by pressing the button on the unit one or more times until the desired time is displayed. The operating time can be set between 1 and 24 hours.

Result ♦ Each time you press the button:

- The time is adjusted by 1 hour and displayed on the control panel
- The unit beeps

♦ The operating time is displayed and decreases automatically to indicate the remaining time.

♦ The air conditioner starts up in the Cool mode automatically when the operating time reaches zero.

➤ You can select the fan speed, temperature, air flow direction and Energy saving mode after setting the On timer and Off timer mode. However, when you change the mode, the On timer and Off timer mode is canceled.

To Cancel the On Timer

To cancel the timer, press:

Timer on the unit one or more times until "--" is displayed.


or

The (On/Off) button on the unit. (The air conditioner operates in the cool mode.)

Setting the Off Timer

The Off Timer enables you to switch off the air conditioner automatically after a given time. You can select the Off Timer only when the air conditioner is on you can select the Off Timer only when the air conditioner operates in the Cool mode.

- 1 Check that the air conditioner has been switched on; if necessary, press the  (On/Off) button.

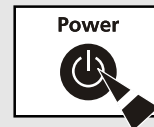


- 2 Set the operating time by pressing the  button on the unit one or more times until the desired time is displayed. The operating time can be set between 1 and 24 hours.

Result


- ◆ Each time you press the  button:
 - The time is adjusted by 1 hour and displayed on the control panel
 - The unit beeps
- ◆ The operating time is displayed and decreases automatically to indicate the remaining time.
- ◆ The air conditioner switch off automatically when the operating time reaches zero.

➤ You can select the fan speed, temperature, air flow direction and Energy saving mode after setting the On timer and Off timer mode. However, when you change the mode, the On timer and Off timer mode is canceled.


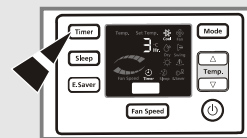


To Cancel the Off Timer

To cancel the timer, press:
Timer on the unit one or more times until "--" is displayed.
or
The  (On/Off) button on the unit.

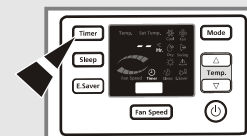

Setting the Sleep Timer

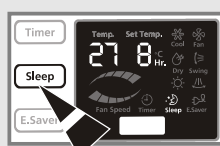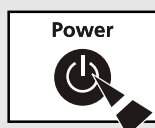

The Sleep Timer can be used when you are cooling your room to switch the air conditioner off automatically after 8 hours.

➤ *If you wish to switch the unit off at a specific time, refer to page 13.*


- 1 Make sure that you have selected the Cool mode.

- 2 Press the **Sleep** button on the unit.

Result:

- ◆ Each time you press a button, the unit beeps.
- ◆ The "8" will be displayed.
- ◆ The remaining time is displayed and decreased by 1 hour automatically to indicate the remaining time.
- ◆ The air conditioner will be controlled as illustration below.

Cooling When the temperature has been increased by 1°C (after 1 hour), it is maintained for 7 hours.

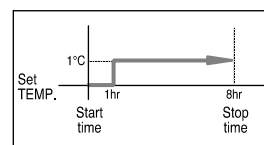

To Cancel the Sleep Timer

To cancel the timer, press:

- ◆ **Sleep** button on the unit.

Result:

- ◆ The unit beeps.
- ◆ The SLEEP indicator is no longer displayed.
- ◆ The air conditioner operates in the mode selected last.

➤ If you select the Energy Saving mode in the Sleep Timer mode, the Sleep Timer will be cancelled and the air conditioner will start up in the Energy Saving mode.

Selecting Energy Saving Mode

If you wish to save energy when using your air conditioner, select the Energy Saving mode.

- 1 To select the energy saving mode, press the **E.Saver** button on the unit one or more times until the Energy Saver indicator lights up.

Result:


- ◆ The fan and compressor cycle on and off together.
- ◆ The fan will continue to run for a short time after the compressor cycles off.

➤ If you would like the air conditioner to run in Fan mode, do not press the **E.Saver** button. You cannot use the Fan mode in the energy saving mode.

- 2 To stop the energy saving mode, press the **E.Saver** button on the unit again.

Result: The fan runs at all times, while the compressor cycles on and off.

➤ If you select the Sleep Timer in the Energy Saving mode, the Energy Saving will be cancelled and the air conditioner will start up in the Sleep Timer mode.

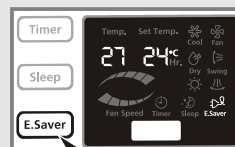

Using the Wireless Remote Control



This chapter indicates how to operate and program your air conditioner with the wireless remote control.

Cooling Your Room

You must select the Cool mode if you wish to adjust the:

- ◆ **Cooling temperature**
- ◆ **Fan Speed when cooling**

- 1 If necessary, press the  (On/Off) button.

Result:

- ◆ The air conditioner starts up in the Cool mode.
- ◆ The unit beeps.



The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.



- 2 If the  is not displayed at the top of the remote control, press the  button on the remote control one or more times until it appears.

Result:

- ◆ The unit beeps each time you press the  button.
- ◆ The air conditioner runs in the Cool mode.


You can change modes at any time.



- 3 To adjust the temperature, press the  buttons one or more times until the required temperature is displayed. Possible temperatures are between 18°C and 30°C inclusive.

Result:

- ◆ Each time you press the  buttons:
 - The temperature is adjusted by 1°C
 - The unit beeps
- ◆ The air conditioner starts cooling, if the room temperature is higher than the selected temperature.
- ◆ If the room temperature reaches the set temperature, the air conditioner stops cooling, but the fan is still operating.

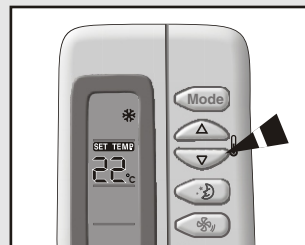

- 4 Select the Fan Speed by pressing the  button one or more times until the required setting is displayed:

-  Low
-  Medium
-  High

Result: Each time you press the  button, the unit beeps.



- 5 To control the direction of the air flow, refer to page 23 and 24.

Airing Your Room



If the atmosphere in your room is stale, you can air the room using the Fan feature.

- 1 If necessary, press the (On/Off) button.

Result:

- ◆ The air conditioner starts up in the Cool mode.
- ◆ The unit beeps.



- 2 If the is not displayed at the top of the remote control, press the button on the remote control one or more times until it appears.

Result:

- ◆ The unit beeps each time you press the button.
- ◆ The air conditioner runs in the Fan mode.
- ◆ The temperature is set automatically.



You can change modes at any time.



- 3 Select the Fan Speed by pressing the button one or more times until the required setting is displayed:

	Low
	Medium
	High

Result: Each time you press the button, the unit beeps.

- 4 To control the direction of the air flow, refer to page 23 and 24.

Removing Excess Humidity

If the atmosphere in your room is very humid or damp, you can remove excess humidity without lowering the room temperature too much.

- 1 If necessary, press the  (On/Off) button.

Result:

- ◆ The air conditioner starts up in the Cool mode.
- ◆ The unit beeps.



The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.

- 2 If the  is not displayed at the top of the remote control, press the  button on the remote control one or more times until it appears.

Result:

- ◆ The unit beeps each time you press the  button.
- ◆ The air conditioner runs in the Dry mode.



You can change modes at any time.

- 3 To adjust the temperature, press the  buttons one or more times until the required temperature is displayed.



Possible temperatures are between 18°C and 30°C inclusive.

Result: Each time you press the  buttons:

- The temperature is adjusted by 1°C
- The unit beeps

The air conditioner starts removing the excess humidity; the quantity of air is adjusted automatically.

- 4 To control the direction of the air flow, refer to page 23 and 24.

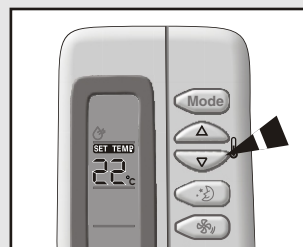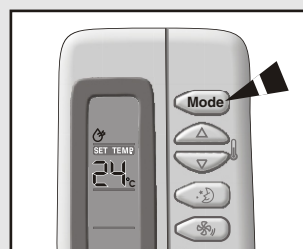

Setting the On Timer



The On Timer enables you to switch on the air conditioner automatically after a given time. You can select the On Timer only when the air conditioner is off. You can select the On Timer only when the air conditioner operates in the Cool or Dry mode.

- 1 To set the operating time, press the **Timer** button one or more times until the required time is displayed. Possible time is between 1 hour and 24 hours inclusive.



- 2 Press the **Set/Cancel** (Set/Cancel) button to complete the setting.

Result:

- ◆ The remaining time is displayed.
- ◆ Blinking of the timer indicator stops.
- ◆ The air conditioner will switch on automatically when the counter displayed on the remote control reaches the set time and disappears the On Timer setting.

➤ You can select the temperature after setting the On Timer mode. However, you can select Energy Saving mode only in the Cool mode.

To Cancel the On Timer




- 1 Press the **Set/Cancel** (Set/Cancel) button.

➤ If you want to turn on the air conditioner before the timer reaches the setting time, press the **On/Off** button.

Setting the Off Timer

The Off Timer enables you to switch off the air conditioner automatically after a given time. You can select the Off Timer only when the air conditioner is on. You can select the Off Timer only when the air conditioner operates in the Cool or Dry mode.

- 1 To set the operating time, press the **Timer** button one or more times until the required time is displayed. Possible time is between 1 hour and 24 hours inclusive.

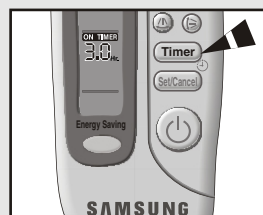

- 2 Press the **Set/Cancel** (Set/Cancel) button to complete the setting.

Result:

- ◆ The remaining time is displayed.
- ◆ Blinking of the timer indicator stops.
- ◆ The air conditioner will switch off automatically when the counter displayed on the remote control reaches the set time and disappears the Off Timer setting.

➤ You can select the Fan Speed, temperature and Energy Saving mode after setting the Off Timer mode.




To Cancel the Off Timer

- 1 Press the **Set/Cancel** (Set/Cancel) button.

➤ If you want to turn off the air conditioner before the timer reaches the setting time, press the **On/Off** button.



Setting the Sleep Timer

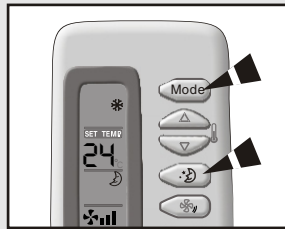

The Sleep Timer can be used when you are cooling to switch the air conditioner off automatically after a period of 8 hours.

➤ *If you wish to switch the unit off at a specific time, refer to page 21.*


1 Make sure that you have selected the Cool mode.

2 Press the  button on the remote control.

Result:

- ◆ Each time you press a button, the unit beeps.
- ◆ The  indicator is displayed.
- ◆ The remaining time is displayed and decreased by 1 hour automatically to indicate the remaining time.
- ◆ The air conditioner will be controlled as illustrations below.

Cooling When the temperature has been increased by 1°C (after 1 hour), it is maintained for 7 hours.

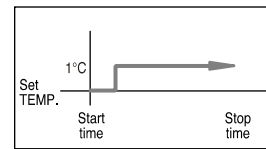

To Cancel the Sleep Timer

To cancel the timer, press:

◆ The  button on the remote control.

Result:

- ◆ The unit beeps.
- ◆ The  indicator is no longer displayed.
- ◆ The air conditioner operates in the mode selected last.

➤ If you select the Energy Saving mode in the Sleep Timer mode, the Sleep Timer will be cancelled and the air conditioner will start up in the Energy Saving mode.

Selecting Energy Saving Mode

If you wish to save energy when using your air conditioner, select the Energy Saving mode.

- 1 To select the Energy Saving mode, press the  button on the remote control one or more times until the Energy Saving indicator lights up.

Result:

- ◆ The fan and compressor cycle on and off together.
- ◆ The fan will continue to run for a short time after the compressor cycles off.

➤ If you would like the air conditioner to run in the Dry mode, do not press the  button. You cannot use the Dry mode in the Energy Saving mode.



- 2 To stop the Energy Saving mode, press the  button on the remote control again.

Result: The fan runs at all times, while the compressor cycles on and off.

➤ If you select the Sleep Timer in the Energy Saving mode, the Energy Saving will be cancelled and the air conditioner will start up in the Sleep Timer mode.



Adjusting the Air Flow Direction Horizontally & Vertically

Depending on the position of the unit in your room, you can adjust the orientation of the inner air flow blades on the right-hand side of the unit, thus increasing the efficiency of the air conditioner.



- 1 Press the  button on the remote.



Result: The inner blades swing automatically left and right.

➤ In the Energy Saving mode, the blades may stop when the compressor is off. For details on the Energy Saving mode, see above.

- 2 To stop the blades moving left and right, press the  button again.

➤ To stop the blades in a specific position and orient the air flow in the corresponding direction, simply press the  button when the blades are in the desired position.

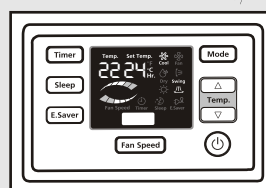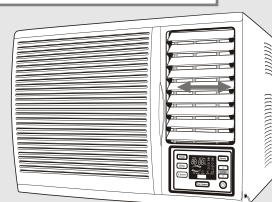

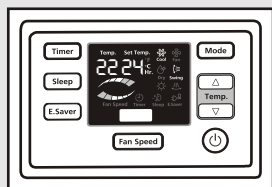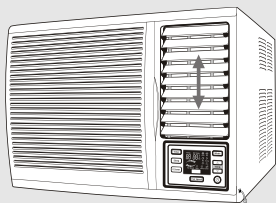

3 Press the  button on the remote.

➤ The outer blades swing automatically up and down.

4 To stop the blades moving up and down, press the  button again.

➤ To stop the blades in a specific position and orient the air flow in the corresponding direction, simply press the  button when the blades are in the desired position.

Operating Recommendation

Here is a recommendation that you should follow when using your air conditioner.

Topic	Recommendation
Power failure	If a power failure occurs when the air conditioner is operating, the unit is switched off. When the power returns, the air conditioner starts up again automatically.

Temperature and Humidity Ranges

The following table indicates the temperature and humidity ranges within which the air conditioner can be used.




Mode	Indoor Temperature	Outdoor Temperature	Indoor Humidity
Cooling	21°C to 32°C approx.	21°C to 54°C approx. *21°C to 43°C approx.	80% or less
If the air conditioner is used at...		Then...	
Higher temperature		The automatic protection feature may be triggered and the air conditioner stopped.	
Lower temperature		A water leakage or some other malfunction may happen if the heat exchanger freezes.	
Higher humidity levels		Water may condense on and drip from the surface of the unit if it is used for long periods.	

* for AW24XSHEB model only.

Cleaning Your Air Conditioner

Be sure to clean the air filter periodically to maintain the air conditioner in the best condition for a long period of time.

➡ *When cleaning the air conditioner, turn it off and pull out the power plug.*

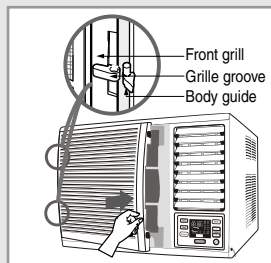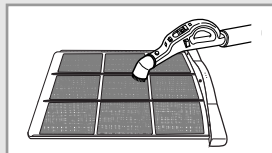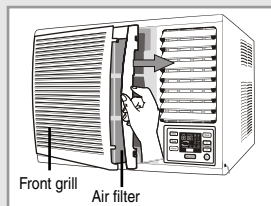

- 1 Hold the air filter handle, slightly pull it to the left side and open the front grill.




The removal of the front grill makes it easier to clean the air conditioner.

CAUTION

Removal and Reassembly of the Front Grill

For user's safety, clip has been installed in the front grill.

- 1 Grasp the lower part of the front grill and the air filter handle, then open the grill. (The open angle of front grill has not to be exceeded 90 degree)
- 2 Pull out the front grill and remove it from front panel.
- 3 Reassembling of front grill should be done in reverse order of disassembly.

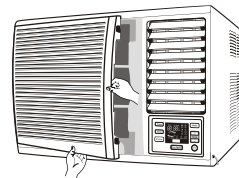

- 2 Pull the air filter to the right side.

- 3 Remove all dust on the air filter with a vacuum cleaner or brush.

- 4 When you have finished, insert the air filter back into its original position.

- 5 Wipe the surface of the unit with a neutral detergent and then wipe it again with dry cloth.
(Be sure not to use benzene, solvent or other chemical products.)



If you...

Then...

Will not use the air conditioner for a long period of time

- ◆ Set the fan going for a few hours to dry the inside of the air conditioner thoroughly.
- ◆ Switch the air conditioner off and unplug it from the wall socket.
- ◆ Clean the filter and outer surfaces.

Have not used the air conditioner for a long period of time

Set the fan going for a few hours to dry the inside of the air conditioner thoroughly.

Solving Common Problems

Before contacting an authorized service center, perform the following simple checks. They may save you the time and expense of an unnecessary call.

Problem	Explanation / Solution
The air conditioner does not operate at all	◆ Check that the circuit breaker used for the air conditioner has not been triggered. ◆ Check that the power cable is plugged into a wall socket and the socket is switched on, if necessary ◆ Check that the temperature indicator on the unit is lit; if necessary press the  (On/Off) button on the remote control or unit.
The air conditioner does not operate with the remote control	◆ Check that there are no obstacles between you and the unit. ◆ Replace the remote control batteries if necessary ◆ Check that you are close enough to the unit (seven metres/yards or less).
No beep is heard when you press the  (On/Off) button on the remote control	◆ Check that you are pointing the remote control at the remote control sensor on the unit. ◆ Replace the remote control batteries if necessary
The air conditioner does not cool	◆ Check that the correct operating mode has been selected(Cool). ◆ The room temperature may be too low ◆ Dust may be blocking the air filter; refer to page 26 for cleaning instructions. ◆ Check that there is no obstacle blocking the air flow into or out of the unit.
The timer is not correctly triggered	◆ Check that the timer has been programmed correctly; refer to pages 12~14 (for unit) and pages 20 to 22 (for remote).
Odour is permeating the room during air conditioning	◆ Ventilate the room.

Technical Specifications

Design and specifications are subject to change without notice.

Model	Capacity (BTU)	Power Supply (Volt)	Current (Amp)	Power (Watt)
AWT17XSHDA	16800	200~220	8.8	1750
AWT18XSHDE	18000	200~220	9.5	1950
AWX24SHEB	24000	220~240	12.0	2700

Installation


Before installation, be sure to check the installation area or the air conditioner, and drain hose.

Checkpoints prior to installation


- 1 Check the cabinet and front grille of the unit for any harmful defects such as scratches.
- 2 Be sure to check the power supply
 - Refer to the specifications on the label attached to the unit.

Installation Conditions

- 1 As the unit is heavy the wall or window of the installation area should have sufficient strength and durability for operation of the air conditioner and for prevention of any vibration or noise.
If it is weak, reinforcement work should be performed separately
- 2 It is advisable to install the air conditioner in the north or west side to prevent the effect of direct sunlight.
When installing it in the south or east side due to unavoidable circumstances, it is advisable to install the sunshade to prevent the direct sunlight.
In this case, take care not to cause any hindrance to the flow of outside air
- 3 When installing the air conditioner be sure to obtain sufficient space on the rear side of the unit for smooth flow of air
When operating the air conditioner in closed areas such as inner building with cooling operation, and result in trouble with the unit.
See the illustration below

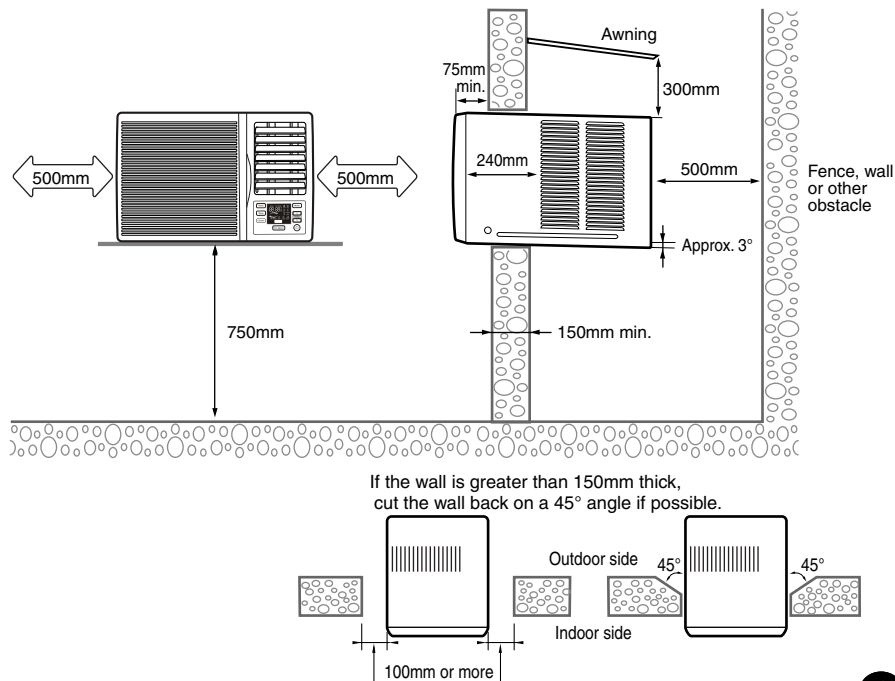

Installation

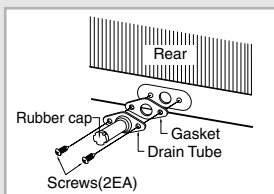

Installation of the Drain Tube

Fix the drain tube as shown in the figure.

Installation of the Drain Pan

The procedure for installing the drain pan should be determined by the condition of the installing area.

◆ **In the case of an area where the drain pan can not be directly installed on the rear side of the unit after installing the air conditioner .**

Example: High storage

1 Open the front grill ; refer to page 26.

2 Remove the front panel.

2-1 Press both sides of the cabinet in the direction of the arrow as shown in the figure.

2-2 Pull the lower part of the front panel slightly forward. (below three inches)

2-3 Lift the front panel upward.

☞ Applying excessive force to remove the front panel may cause damage to the tab ; be sure not to use excessive force.

3 Remove two screws on the lower right and left sides of the unit.

4 Remove the chassis from the cabinet.

5 Remove the rubber cap inserted into the basepan.




6 Fix the drain pan as shown in the figure, and then connect the drain hose. (You can use any commercially-available drain hose.)

7 Install the cabinet at the specified area after installing the drain pan, and then re-assemble it in the original condition.

➤ Tighten the supplied screw on the lower part of front panel to secure the front panel.

◆ **In the case of an area where the drain pan can be directly installed on the rear side of the unit after installing the air conditioner .**

1 Follow steps 5 and 6 only

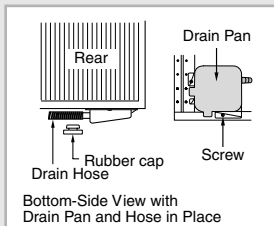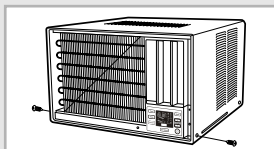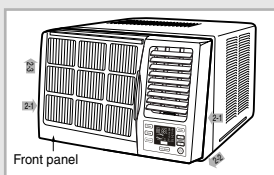

THIS AIR CONDITIONER IS MANUFACTURED BY:

